

Test	Objects	Status	Remarks
4.1.1	hrMemorySize hrStorageSize hrStorageTypes hrStorageType hrStorageDescr hrStorageUsed	PASSED	Storage Table Empty
4.1.2	hrDeviceTypes hrDeviceType hrDeviceStatus hrDeviceDescr hrDeviceProcessor hrDeviceNetwork hrDevicePrinter hrDeviceDiskStorage	FAILED	Print Table Error
4.1.3	hrDeviceType hrProcessorLoad hrDeviceProcessor	PASSED	Processor Table Empty
4.1.4	hrDeviceNetwork hrDeviceType hrNetworkIfIndex ifAdminStatus hrDeviceStatus	PASSED	Host Resources Network Table test passed
4.1.5	hrDeviceType hrDeviceStatus hrDeviceDescr hrDevicePrinter	PASSED	Host Printer Table test passed
4.1.6	hrDeviceDiskStorage hrDeviceType hrDiskStorageCapacity hrDiskStorageMedia hrDiskStorageRemoveable hrDiskStorageAccess	PASSED	Disk Storage Table Empty
4.1.7	hrPartitionLabel hrPartitionSize hrPartitionFSIndex hrFSMountPoint	PASSED	Partition Table Empty
4.1.8	hrFSTypes hrFSMountPoint hrFSRemoteMountPoint hrFSType hrFSAccess hrFSBootable hrFSLastPartialBackupDate hrFSLastFullBackupDate	PASSED	File System Table Empty
5.1.1	hrDeviceType hrDeviceDescr hrDevicePrinter	PASSED	Host Printer Table test passed
5.1.2	hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState	FAILED	Unexpected hrPrinterStatus

Test	Objects	Status	Remarks
5.2.1	prtGeneralCurrentOperator prtGeneralServicePerson	PASSED	Responsible Party Group Passed
5.2.2	prtCoverStatus prtCoverDescription prtGeneralCurrentLocalization	PASSED	Cover Table Test Passed
5.2.3	prtGeneralReset	PASSED	General Printer Group Test Passed
5.2.4	prtGeneralReset hrPrinterStatus hrDeviceStatus prtMarkerPowerOnCount prtMarkerLifeCount prtMarkerMarkTech prtMarkerDefaultIndex prtGeneralCurrentOperator	FAILED	Reset to Factory defaults failed
5.3.1	prtInputDefaultIndex prtInputMediaName prtInputName prtInputDimUnit prtInputCapacityUnit prtInputType prtInputStatus prtInputMaxCapacity prtInputCurrentLevel	FAILED	error noSuchName setting prtInputMediaDimFeedDirDeclared to 279400
5.3.1	prtInputDefaultIndex prtInputMediaName prtInputName prtInputDimUnit prtInputCapacityUnit prtInputType prtInputStatus prtInputMaxCapacity prtInputCurrentLevel	FAILED	Unexpected Value
5.3.2	prtInputType prtInputDimUnit prtInputMediaDimFeedDirDeclared prtInputMediaDimFeedDirChosen prtInputMediaDimXFeedDirChosen prtInputCapacityUnit prtInputMaxCapacity prtInputCurrentLevel prtInputStatus prtInputMediaName	FAILED	Prerequisite Test 5.3.1 failed
5.3.3	prtInputName prtInputVendorName prtInputModel prtInputVersion prtInputSerialNumber prtInputDescription	FAILED	Prerequisite Test 5.3.1 failed

Test	Objects	Status	Remarks
5.3.4	prtInputSecurity prtGeneralCurrentLocalization	FAILED	Prerequisite Test 5.3.1 failed
5.4.1	prtInputMediaWeight prtInputMediaType prtInputMediaColor prtInputMediaFormParts	FAILED	Unexpected status
5.4.2	prtOutputDefaultIndex prtOutputName prtOutputType prtOutputStatus prtOutputCapacityUnit prtOutputType	FAILED	Prerequisite Test 5.4.1 failed
5.4.3	prtOutputType prtOutputCapacityUnit prtOutputMaxCapacity prtOutputRemainingCapacity prtOutputStatus	FAILED	Prerequisite Test 5.4.1 failed
5.4.4	prtOutputName prtOutputVendorName prtOutputModel prtOutputVersion prtOutputSerialNumber prtOutputDescription prtOutputSecurity prtGeneralCurrentLocalization	FAILED	Prerequisite Test 5.4.1 failed
5.4.5	prtOutputDimUnit prtOutputMaxDimFeedDir prtOutputMaxDimXFeedDir prtOutputMinDimFeedDir prtOutputMinDimXFeedDir	FAILED	Prerequisite Test 5.4.1 failed
5.5.1	prtOutputStackingOrder prtOutputPageDeliveryOrientation \$var	PASSED	Marker Table Test Passed
5.5.2	prtMarkerCounterUnit prtMarkerStatus prtMarkerPowerOnCount prtMarkerLifeCount prtMarkerAddressabilityUnit prtMarkerMarkTech prtMarkerProcessColorants prtMarkerSpotColorants prtMarkerMarkTech prtMarkerDefaultIndex prtMarkerNorthMargin prtMarkerSouthMargin prtMarkerEastMargin prtMarkerWestMargin prtMarkerAddressabilityFeedDir prtMarkerAddressabilityXFeedDir	PASSED	Marker Group Test Passed

Test	Objects	Status	Remarks
5.5.3	prtMarkerAddressabilityUnit prtMarkerAddressabilityFeedDir prtMarkerAddressabilityXFeedDir prtMarkerNorthMargin prtMarkerSouthMargin prtMarkerEastMargin prtMarkerWestMargin prtMarkerSuppliesType prtMarkerPowerOnCount prtMarkerLifeCount	PASSED	prtMarkerSuppliesTable is empty
5.5.4	prtMarkerSuppliesColorantIndex prtMarkerSuppliesMarkerIndex prtMarkerSuppliesClass prtMarkerSuppliesSupplyUnit prtMarkerSuppliesMaxCapacity prtMarkerSuppliesLevel prtMarkerStatus prtMarkerColorantRole prtMarkerSuppliesDescription prtGeneralCurrentLocalization	PASSED	Marker Colorant Table Empty
5.6.1	prtMarkerColorantMarkerIndex prtMarkerColorantRole prtMarkerColorantTonality prtMarkerStatus	PASSED	Media Path Table Test Passed
5.6.2	prtMediaPathMaxSpeedPrintUnit prtMediaPathMediaSizeUnit prtMediaPathType prtMediaPathStatus prtMediaPathMaxSpeed prtMediaPathDescription prtMediaPathDefaultIndex	PASSED	Media Path Group Test Passed
5.7.1	prtMediaPathMaxMediaFeedDir prtMediaPathMaxMediaXFeedDir prtMediaPathMinMediaFeedDir prtMediaPathMinMediaXFeedDir prtMediaPathMediaSizeUnit prtMediaPathType prtMediaPathDescription prtGeneralCurrentLocalization	FAILED	error noSuchName getting iflnOctets
	prtChannelType prtChannelState prtChannelStatus prtChannelIfIndex ifAdminStatus		

Test	Objects	Status	Remarks
5.7.1	ifInOctets prtInterpreterLangVersion	FAILED	Invalid referece to ifTable
5.8.1	prtChannelType prtChannelState prtChannelStatus prtChannellfIndex ifAdminStatus ifInOctets prtInterpreterLangVersion	FAILED	Unexpected result
5.8.1	prtInterpreterLangFamily prtInterpreterDefaultOrientatio n prtInterpreterTwoWay prtInterpreterDescription prtGeneralCurrentLocalization	FAILED	Orientation changed not validated
5.8.1	prtInterpreterLangFamily prtInterpreterDefaultOrientatio n prtInterpreterTwoWay prtInterpreterDescription prtGeneralCurrentLocalization	FAILED	timeout error on SET
5.8.1	prtInterpreterLangFamily prtInterpreterDefaultOrientatio n prtInterpreterTwoWay prtInterpreterDescription prtGeneralCurrentLocalization	PASSED	Interpreter Group test passed
5.9.1	prtInterpreterLangFamily prtInterpreterDefaultOrientatio n prtInterpreterTwoWay prtInterpreterDescription prtGeneralCurrentLocalization	FAILED	error noSuchName setting prtConsoleDisable to 4
5.9.2	prtConsoleNumberOfDisplayL ines prtConsoleNumberOfDisplayC hars prtConsoleLocalization prtConsoleDisable prtConsoleLocalization prtLocalizationLanguage	FAILED	error noSuchName setting prtConsoleDisplayBufferText to XXX
5.9.3	prtConsoleDisplayBufferText	PASSED	Console Light table test passed
5.10.1	prtConsoleOnTime prtConsoleOffTime prtConsoleDescription	PASSED	Printer doesn't send traps
5.10.2	printerV1Alert hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState	PASSED	Printer doesn't send traps

Test	Objects	Status	Remarks
5.10.3	printerV1Alert hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState	PASSED	Printer doesn't send traps
5.10.4	printerV1Alert hrDeviceStatus hrPrinterStatus hrPrinterDetectedErrorState	PASSED	Printer doesn't send traps